


PLAN VIEW



ELEVATION



PERSPECTIVE

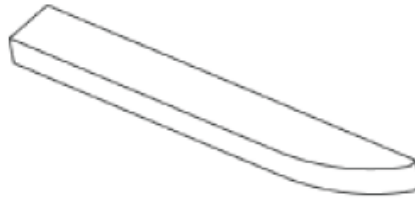


INSTALLATION W/ BLOCKING

2- STAINLESS STEEL STANDOFFS AND SCREWS.
HOLES ARE PRE-DRILLED INTO MARBLE.




STANDOFF W/
STAINLESS STEEL SCREW




USE IN STANDARD INSTALLATION
PROCEDURES WHEN BLOCKING PROVIDED
FOR FR-06 FOOT REST.

INSTALLATION W/OUT BLOCKING

2- STAINLESS STEEL STANDOFFS AND
WINGITS PROVIDED. HOLES ARE
PRE-DRILLED INTO MARBLE.



STANDOFF W/ WINGIT



USE ONLY WHEN BLOCKING IS
UNAVAILABLE. WHEN BLOCKING IS
AVAILABLE, STANDOFFS AND SCREWS MUST
BE USED TO ENSURE ADEQUATE STABILITY.