



**Mincey Marble Mfg., Inc.**

1940 New Harvest Road

Gainesville, GA 30507

Ph: 800.533.1806

Fx: 770.531.0935

[www.minceymarble.com](http://www.minceymarble.com)


## **Installation Instructions for Mincey Marble Manufacturing's Chrome Plated Corner Mount Foot Rest**

**Product number: FR- 10**

**Please read the following before attempting to install your new  
chrome plated corner mount foot rest**

***DISCLAIMER NOTICE: If the prescribed method of installation is not followed precisely, the foot rest may detach from the wall and cause damage to the panel system and the sheetrock wall. If the foot rest detaches, physical injury to the occupant of the shower may occur. Mincey Marble will not be liable for any damages to persons or property because of incorrect installation.***

***These instructions have been written for Mincey Marble's FR-10 chrome plated corner mount foot rest. If you have received a different product than shown, please contact our office so we can send proper instructions to you.***

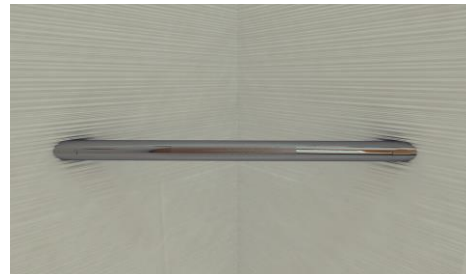

**FR - 10**

*In preparation, before installing the foot rest, you will need to have completed the installation of the panel system and sealed the seams of the shower behind where the foot rest is to be installed with 100% silicone.*

**Tools and Materials required:**

1. Torpedo level
2. Drill with 5/16" masonry drill bit
3. 2 - Stainless Steel screws
4. #2 Phillips Head screwdriver
5. Pencil
6. Measuring tape
7. Safety glasses

*Please note: The FR-10 must only be installed into an area that contains wood blocking*

**PLEASE NOTE:** *There should be a minimum 2 x 6 pressure treated wood blocking in the wall behind the substrate material in the shower enclosure, prior to the cast marble panels being installed. The blocking should be securely installed to the structural framework of the wall, should not have any free movement and the center of the block should measure 16" above finished floor, The foot rest will be centered 12" from the top of the curb of the shower pan on the "dry wall" or the wall opposite the shower head.*

**Installing the chrome plated corner mount foot rest:**

1. To determine the specified height of the foot rest, remove it from the box and hold it ~12" from the top of the shower pan curb in the corner of the backwall and the dry wall (the wall opposite the shower head). Make sure the placement is correct before starting the install. Failure to do this could cause unnecessary repair work, which can be time consuming and costly.
2. The foot rest comes assembled and includes two accessories packets. One packet contains two stainless steel screws. The other has the decorative hole covers. **It is extremely important that you do not lose any of the pieces in the accessories packets. There are no spares.**
3. There is an oval hole in each end of the foot rest. Looking through the holes you will see the screw cutout sections. Hold the foot rest up to the proper place on the walls and using a pencil, mark the backwall and sidewall where the drill holes will be located. Remove the foot rest and using the torpedo level, make sure the marks for both drill holes are level.
4. Using the drill, drill the marked holes in each panel wall. Wipe the drill debris off panels. Pick up the foot rest and looking through the oval holes in the top, place the screw cut outs over the drill holes. Do the same for the opposite side. Then take the 2 stainless steel screws and using the #2 Phillips head screwdriver, screw the screws into the blocking and tighten until snug.

5. Snap the silver hole covers into place and the foot rest is installed.

***Failure to carefully follow these instructions could cause the holes to be drilled in the wrong locations.***

**If you have any questions, please call Mincey Marble Customer Service at 800.533.1806.**