



**Mincey Marble Mfg., Inc.**  
1940 New Harvest Road  
Gainesville, GA 30507  
Ph: 800.533.1806  
Fx: 770.531.0935  
[www.minceymarble.com](http://www.minceymarble.com)

## **Installation Instructions for Mincey Marble Manufacturing's 30" Wall Mount Accessories Ledge**

**Product number: SS- 03 - 30**

**Please read the following before attempting to install your new cast marble wall mount accessories ledge**

**Section 1 is for areas with blocking and Section 2 is for areas without.**

***These instructions have been written for Mincey Marble's SS-03 – 30, 30" long cast marble wall mount accessories ledge. If you have a different product than shown, please call us for instructions for the product you have purchased.***



**SS-03- 30**

### **Section 1**

**This section provides the necessary details for installing the SS-03- 30, 30" long accessories ledge, into an area that includes wood blocking. This is the preferred method of install.**

***In preparation, before installing this accessories ledge, you will need to have completed the installation of the panel system and sealed the seams of the shower where the ledge is to be installed with 100% silicone.***

## **Materials and Tools required:**

1. Drill, preferably corded, for drilling holes
2. 3/16" masonry drill bit
3. Measuring tape
4. Pencil
5. 100% Silicone for marble to marble seams (color matched for the marble)
6. Clean, dry cloth for the accessories ledge and the wall
7. #2 Phillips Head Screwdriver to tighten screws when attaching standoff mounting tubes
8. 2 – 3" Stainless Steel Truss head screws


**IMPORTANT NOTE: The accessories ledge will be located on the same wall as the FR-03 - 30 foot rest, which is the end wall opposite from the shower head. The ledge should be installed so that it butts against the back shower panel. It will be pre-trimmed by Mincey Marble prior to shipping so that it will fit flush against the back wall.**

## **Installing the Accessories Ledge with wood blocking:**

1. The installer should measure from the trimmed end of the ledge to the first hole and then mark the first hole that distance from the back wall, keeping the hole centered, then measure from the unfinished end to the second hole and mark that hole that distance from the back wall, keeping the hole centered. .
2. Pre-drill the holes for the mounting hardware using the 3/16" masonry drill bit and the corded drill.
3. Apply 100% Silicone to the back of the ledge and into the holes where the 3" Truss head screws will go. Firmly press the accessories ledge into place against the wall and screw the accessories ledge into place. See drawing (A).

### **Drawing A:**

## **3" Truss Head Screws**



### **Drawing B:**

2- Stainless Steel Standoffs and Screws provided. Holes will be pre-drilled into marble.



4. Be sure to immediately clean up any silicone that may have squeezed out from behind the ledge. A clean, dry cloth should be all that is needed, but acetone or mineral spirits can be used on a rag to clean up excess silicone.
5. Once the ledge is securely in place, seal around the entire perimeter of the ledge to the wall with color matching 100% silicone.

The accessories ledge should be allowed to remain in place for a minimum of 48 hours to allow the silicone to cure before weight is applied. Absolutely NO weight should be applied during the first 48 hours as this will weaken the silicone bond. If the ledge is used before the allotted 48 hours **all warranties will be void.**

***DISCLAIMER NOTICE: If the prescribed method of installation is not followed precisely, the accessories ledge may detach from the wall and cause damage to the panels and the walls. If the shower is occupied and the ledge detaches, physical injury to the occupant of the shower can occur. Mincey Marble will not be liable for any damages to persons or property due to incorrect installation.***

## **Section II**

This section provides the necessary details for installing the SS-03-30, 30” long accessories ledge, into an area that does **NOT** include wood blocking.

***In preparation, before installing this accessories ledge, you will need to have completed the installation of the panel system and sealed the seams of the shower where the ledge is to be installed with 100% silicone.***

***IMPORTANT NOTE: The accessories ledge will be located on the same wall as the FR-03 - 30 foot rest, which is the end wall opposite from the shower head. The ledge should be installed so that it butts against the back shower panel. It will be pre-trimmed by Mincey Marble prior to shipping so that it will fit flush against the back wall.***


### **Materials and Tools required:**

1. Drill, preferably corded, for drilling holes
2. 3/16” masonry drill bit
3. Measuring tape
4. Pencil
5. 100% Silicone for marble to marble seams (color matched for the marble)
6. Clean, dry cloth for the accessories ledge and the wall
7. #2 Phillips Head Screwdriver to tighten screws when attaching standoff mounting tubes
8. 2 – WingIt MAW35-SD fasteners and 2 – standoff tubes (provided by Mincey Marble)
9. Either a WingIt Apache 200 Drill Bit P/N# WA200GT34 (which may be purchased from Mincey Marble) or a 3/4” hole saw, for drilling holes for MAW35-SD Master WingIt.

## **Installing the Accessories Ledge without wood blocking:**

1. The installer should measure from the trimmed end of the ledge to the first hole and then mark the first hole that distance from the back wall, keeping the hole centered, then measure from the unfinished end to the second hole and mark that hole that distance from the back wall, keeping the hole centered. .
2. Pre-drill the holes for the mounting hardware using the 3/16" masonry drill bit and the corded drill.
3. Insert an "L" shaped wire. Twirl the wire and make sure you don't hit an obstruction. If you do hit a wall stud, you can move the hole location either forward or backward up to an inch and the ledge will still cover the other holes.
4. Assemble the mounting hardware as shown in Drawing (A).

**Drawing A:**

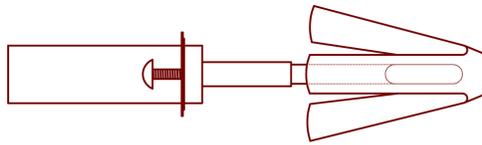

## **Standoff WingIt**

5. Install the WingIt Model # MAW35-SD as per instructions which accompany the WingIts package. See drawing (B). Make sure to tighten the screw securely, as this assembly will be what supports most of the weight of the ledge and anything that is placed on it.

**Drawing B:**

**2-Standoff WingIts provided. Holes will be pre-drilled into marble.**



6. Apply 100% silicone to the entire back of the ledge and into the hole that will receive the mounting hardware.
7. Carefully align the holes with the mounting hardware on the wall and slide the ledge onto the mounting hardware. Apply even pressure and make sure the back of the ledge is pressed completely against the wall.
8. Be sure to immediately clean up any silicone that may have squeezed out from behind the ledge. A clean, dry cloth should be all that is needed, but acetone or mineral spirits can be used on a rag to clean up excess silicone.
9. Once the ledge is securely in place, seal around the entire perimeter of the ledge to the wall with color matching 100% silicone.

The accessories ledge should be allowed to remain in place for a minimum of 48 hours to allow the silicone to cure before weight is applied. Absolutely NO weight should be applied during the first 48 hours as this will weaken the silicone bond. If the ledge is used before the allotted 48 hours **all warranties will be void.**

***DISCLAIMER NOTICE: If the prescribed method of installation is not followed precisely, the accessories ledge may detach from the wall and cause damage to the panels and the walls. If the shower is occupied and the ledge detaches, physical injury to the occupant of the shower can occur. Mincey Marble will not be liable for any damages to persons or property due to incorrect installation.***

**If you have any questions, please call Mincey Marble Customer Service at 800.533.1806**